

N°	Cod.	Descrizione	Description	Note	Q.ty	Model
1	2803 0435	Kit Raccordo Asp. Deterg.	Chem. Coupling Kit		1	
2	1802 0180	Molla Detergente	Detergent Spring		1	
3	3003 0026	Sfera	Ball		1	
4	2803 0424	Raccordo Asp. Deterg.	Chem. Coupling		1	
5	3202 0018	Tappo	Cap	G1/8"	1	
6	3609 0014	Vite	Screw	M8x55	4	
7	3218 0327	Testata Pompa	Manifold		1	
	3218 0329	Testata Pompa	Manifold		1	Solo / Only TS
8	1220 0058	Gruppo Valv. Asp./Mand.	Suct./Del. Valve Ass.y kit		6	
	1220 0045	Gruppo Valv. Asp./Mand.	Suct./Del. Valve Ass.y kit		6	Solo / Only 8/120TS - 9/140TS
9	1210 0049	Guarnizione OR	O-Ring	Ø1,78x12,42	6	
10	3009 0170	Sede Valvola Regol.	Valve Seat		6	
11	3604 0028	Valvola Aspir./Mand.	Suct./Del. Valve		6	
12	1802 0227	Molla Valv. Asp./Mand.	Suct./Del. Valve Spring		6	
	1802 0192	Molla Valv. Asp./Mand.	Suct./Del. Valve Spring		6	Solo / Only 8/120TS - 9/140TS
13	1205 0037	Gabbia Valv. Asp./Mand.	Suct./Del. Valve Cage		6	
	1205 0033	Gabbia Valv. Asp./Mand.	Suct./Del. Valve Cage		6	Solo / Only 8/120TS - 9/140TS
14	0601 0273	Distanziale	Spacer		2	
15	1210 0151	Guarnizione OR	O-Ring	Ø1,78x17,17	6	
16	3202 0236	Tappo	Plug		6	
17	2409 0089	Pistone	Piston	Ø14	3	
	2409 0087	Pistone	Piston	Ø14 Inox	3	Solo / Only 8/120TS - 8/140TS
18	1802 0153	Molla	Spring		3	
19	0009 0221	Anello	Ring		3	
20	0009 0220	Anello	Ring	Ø14	3	
21	1210 0429	Guarnizione OR	O-Ring	Ø3x92	1	
22	0001 0432	Albero Eccentrico	Eccentric Shaft	7°	1	8/120 - 8/120TS
	0001 0417	Albero Eccentrico	Eccentric Shaft	8°	1	9/140 - 9/140TS
	0001 0480	Albero Eccentrico	Eccentric Shaft	9°30'	1	11/120 - 11/120TS
	0001 0481	Albero Eccentrico	Eccentric Shaft	10°	1	11/140 - 11/140TS
23	0436 0017	Cuscinetto Assiale	Axial Bearing	Ø45x65x14	1	
24	2816 0088	Ralla Cuscinetto	Thrust Bearing		1	
25	3609 0005	Vite	Screw	M8x20	1	
26	1817 0064	Manopola	Knob		1	
27	1215 0584	Kit Valvola Regolazione	Regulation Valve Ass.y	140 bar	1	8/120 - 8/120TS 11/120 - 11/120TS
	1215 0585	Kit Valvola Regolazione	Regulation Valve Ass.y	180 bar	1	9/140 - 9/140TS 11/140 - 11/140TS 11/170 - 11/170TS
28	3609 0005	Vite	Screw	M8x20	4	
29	3201 0027	Spia Livello Olio	Oil Indicator	G1/2"	1	
30	1210 0048	Guarnizione OR	O-Ring	Ø2,62x20,24	1	
31	3200 0086	Tappo	Plug		1	8/120
	3200 0071	Tappo	Plug		1	9/140 - 11/120 11/140
32	0403 0135	Carter Pompa	Pump Crankcase		1	
	0403 0145	Carter Pompa	Pump Crankcase		1	Solo / Only 11/140
33	3200 0096	Tappo	Cap	G1/4"	1	Solo / Only
34	1209 0117	Guarnizione	Seal	Ø13x20x2	1	11/140 - 11/170
35	0019 0058	Anello Tenuta Olio	Oil Seal	Ø14x22x5/7	3	
	0019 0123	Anello Tenuta Olio	Oil Seal	Ø14x22x5/7	3	Solo / Only 11/140 - 11/170
36	0601 0308	Distanziale Paraolio	Oil Seal Spacer		3	
37	1241 0057	Guarnizione Tenuta	Packing	Ø14x22x4	3	
38	1210 0356	Guarnizione OR	O-Ring	Ø1,78x25,12	3	
39	0009 0219	Anello Porta Guarniz.	Packing Retainer		3	
40	0009 0369	Anello	Ring		3	
41	1241 0059	Guarnizione Tenuta	Packing		3	
42	2409 0091	Kit Pistone NON Ritorno	Check Valve Kit		1	
43	1210 0460	Guarnizione OR	O-Ring	Ø2,4x4,3	1	
44	2409 0086	Pistone NON Ritorno	Check Valve		1	
45	1802 0197	Molla	Spring		1	
46	3410 0311	Kit Eiettore	Injector Body Kit	M22x1,5	1	
	3410 0317	Kit Eiettore	Injector Body Kit	G3/8"	1	Solo / Only 9/140TS
47	1210 0040	Guarnizione OR	O-Ring	Ø1,78x15,6	1	
48	1210 0049	Guarnizione OR	O-Ring	Ø1,78x12,42	1	
49	3200 0007	Tappo	Cap	G3/8"	1	
	3200 0084	Tappo	Cap	G3/8"	1	Solo / Only 11/140TS 11/170TS
50	3202 0018	Tappo	Cap	G1/8"	1	




N°	Cod.	Descrizione	Description	Note	Q.ty	Model
51	3200 0017	Tappo	Plug	G1/8x8	1	
52	2000 0105	Nipplo	Nipple		1	
53	1002 0132	Filtro Acqua	Water Filter		1	
54	2803 0325	Raccordo Aspirazine	Quick Coupler		1	
55	2811 0127	Rondella Rame	Copper Washer	Ø14x18x1,5	1	
56	2812 0081	Ron. Reg. Detergente	Detergent Washer		1	
57	1802 0297	Molla	Spring		1	
58	0111 0006	Kit Asta Total Stop	Total Stop Rod Kit		1	
59	1210 0227	Guarnizione OR	O-Ring	Ø1,78x5,25	1	
60	0009 0110	Anello	Ring	Ø1,78x6,07	1	Solo / Only TS
61	0015 0200	Asta Valvola	Rod		1	
62	1210 0146	Guarnizione OR	O-Ring	Ø1,78x2,9	1	
63	0009 0202	Anello	Ring		1	
64	3605 0117	Vite Speciale	Special Screw		1	
65	0009 0229	Anello	Ring		1	
66	2416 0112	Protezione Interruttore	Switch Protection		1	
67	3001 0538	Scatola Total Stop	Total Stop Box		1	
68	1201 0137	Guarnizione	Gasket	PG11	1	
69	1200 0056	Galletto	Ring Nut	PG11	1	
70	0456 0326	Cavo Total Stop	Total Stop Cable	MNF	1	8/120TS
	0456 0264	Cavo Total Stop	Total Stop Cable	MNF	1	9/140TS 11/120TS
	0456 0270	Cavo Total Stop	Total Stop Cable	TRF	1	11/140TS 11/170TS
71	3625 0048	Vite	Screw	3x10	3	
72	0402 0200	Coperchio	Cover		1	Solo / Only TS
73	1201 0136	Guarnizione OR	O-Ring	Ø2x118,5	1	
74	1825 0016	Interruttore Total Stop	Total Stop Switch	16A	1	8/120TS - 9/140TS 11/120TS
	1825 0010	Interruttore Total Stop	Total Stop Switch	10A	1	Solo / Only 11/140TS 11/170TS
75	1202 0066	Gancio ad"U"	"H" Hook		1	Solo / Only TS
76	0608 0030	Kit Easy Start	Easy Start Kit		1	8/120TS - 9/140TS 11/120TS
	3200 0084	Tappo Easy Start	Easy Start Cap		1	11/140TS 11/170TS
77	1816 0125	Manometro	Gauge	Ø40 G1/8" 0-160bar	1	8/120TS
	1816 0104	Manometro	Gauge	Ø40 G1/8" 0-300bar	1	9/140TS 11/140TS 11/170TS
	1816 0100	Manometro	Gauge	Ø40 G1/8" 0-160bar	1	11/120TS

Kit Ricambi




Spare Parts Kit

100	5019 0078	Kit Guarnizioni Acqua	Water Seal Kit		1	
101	5025 0014	Kit Valvola	Valve Kit		1	
102	5025 0079	Kit Guarnizioni Olio	Oil Seal Kit		1	
103	3103 0023	Kit Total Stop Completo	Complete Total Stop Kit	MNF	1	8/120TS - 9/140TS 11/120TS
	3103 0038	Kit Total Stop Completo	Complete Total Stop Kit	TRF	1	Solo / Only 11/140TS 11/170TS

Motopompe TS con Total Stop
TS Motorpumps with Total Stop

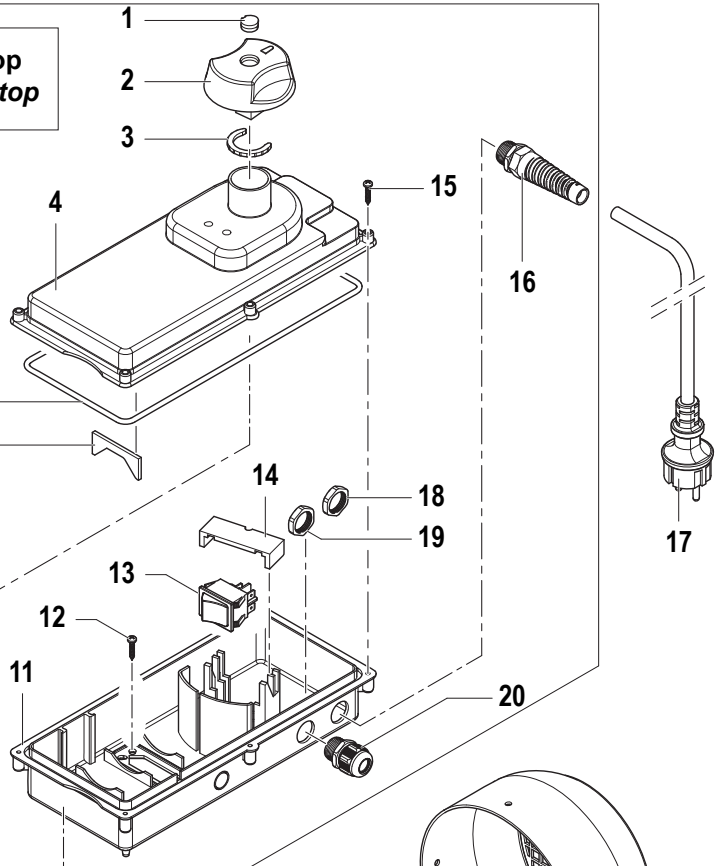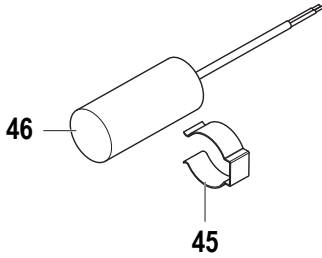

Motopompe senza Total Stop
Motorpumps without Total Stop

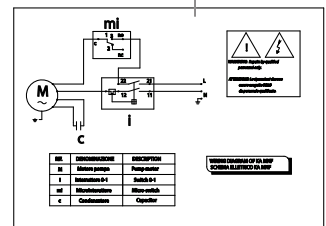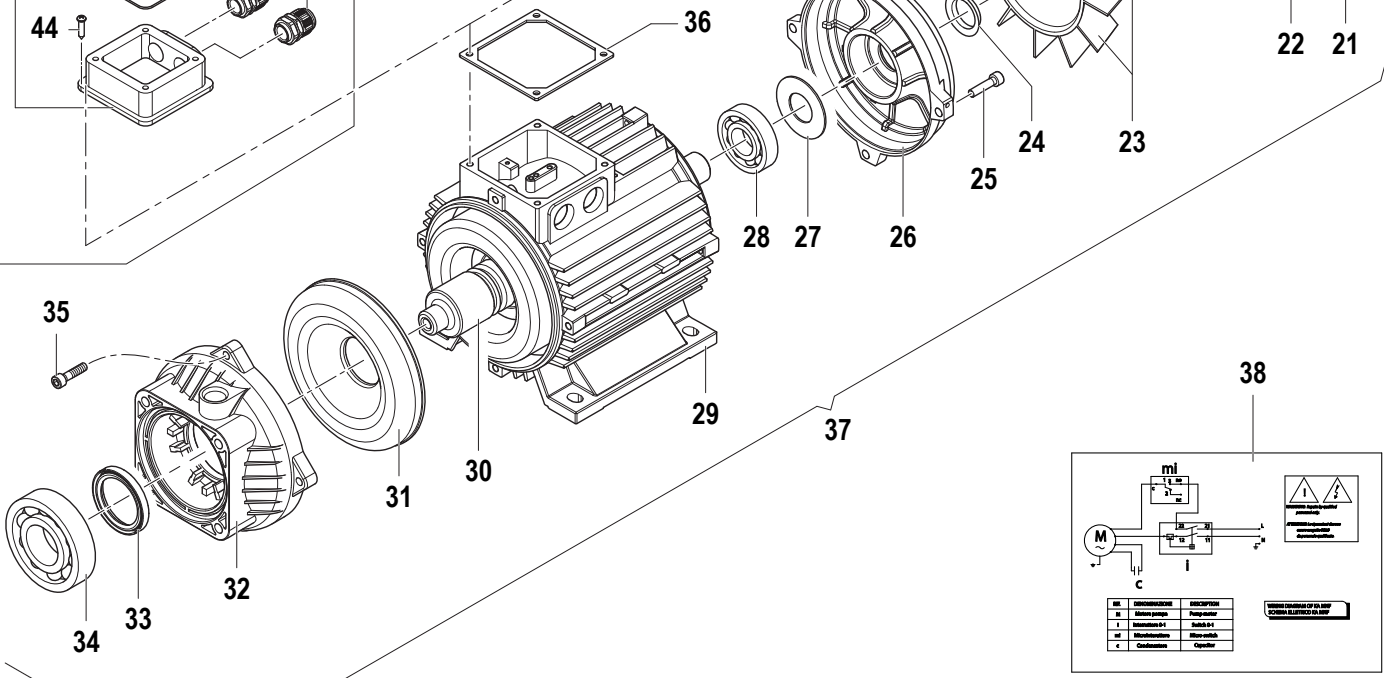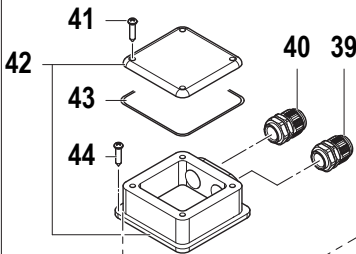

N°	Cod.	Descrizione	Description	Note	Qty	Model
1	3202 0281	Tappo	Cap		1	
2	1817 0069	Manopola	Knob		1	
3	0009 0263	Anello	Ring		1	Solo / Only TS
4	0402 0245	Coperchio	Cover		1	
5	1201 0143	Guarnizione Scatola El.	Electrical Box Gasket		1	
6	0601 0292	Distanziale	Spacer		1	Solo / Only 8/120TS 9/140TS 11/120TS
7	1210 0394	Guarnizione OR	O-Ring	Ø2x25	1	
8	3003 0007	Sfera	Ball		1	Solo / Only TS
9	1802 0195	Molla (Filo Ø1)	Spring (Wire Ø1)	Ø8x16	1	
10	1600 0079	Leva Interruttore	Switch Lever		1	
11	3001 0149	Scatola Elettrica	Electrical Box	PG 11	1	Solo / Only 8/120TS 9/140TS 11/120TS
	3001 0153	Scatola Elettrica	Electrical Box	PG 13	1	Solo / Only 11/140TS 11/170TS
12	3625 0052	Vite	Screw	M4,8x13	4	Solo / Only TS
13	1410 0084	Interruttore	Switch	14A	1	8/120TS
	1410 0061	Interruttore	Switch	16A	1	9/140TS 11/120TS
	1410 0088	Interruttore	Switch	8A	1	11/140TS
	1410 0089	Interruttore	Switch	10A	1	11/170TS
14	0418 0044	Fermo Interruttore	Switch Holder		1	Solo / Only TS
	0418 0045	Fermo Interruttore	Switch Holder		1	11/140TS 11/170TS
15	3605 0154	Vite Speciale	Special Screw	Ø4x25	6	Solo / Only TS
16	2434 0027	Passacavo	Cable Holder	PG 11	1	Solo / Only 8/120TS 9/140TS 11/120TS
	2434 0007	Passacavo	Cable Holder	PG 13	1	Solo / Only 11/140TS 11/170TS
17	0456 0283	Cavo Elettrico	Electrical Cable	3Gx2,5 mm²	1	8/120 - 9/140 11/120
	0456 0298	Cavo Elettrico	Electrical Cable	4Gx1,5 mm²	1	11/140 - 11/170
	0456 0260	Cavo Elettrico	Electrical Cable	3Gx1,5 mm²	1	8/120TS 9/140TS 11/120TS
	0456 0271	Cavo Elettrico	Electrical Cable	4Gx1,5 mm²	1	11/140TS 11/170TS
18	1227 0028	Ghiera	Ring Nut	PG 11	1	Solo / Only 8/120TS 9/140TS 11/120TS
	1227 0027	Ghiera	Ring Nut	PG 13	1	Solo / Only 11/140TS 11/170TS
19	1227 0028	Ghiera	Ring Nut	PG 11	1	Solo / Only 8/120TS 9/140TS 11/120TS
	1227 0027	Ghiera	Ring Nut	PG 13	1	Solo / Only 11/140TS 11/170TS
20	2434 0036	Pressacavo	Cable Holder	PG 11	1	Solo / Only 8/120TS 9/140TS 11/120TS
	2434 0029	Pressacavo	Cable Holder	PG 11	1	Solo / Only 11/140TS 11/170TS
21	3609 0041	Vite	Screw	M6x25	4	
22	0402 0261	Copriventola	Fan Cover		1	
23	3632 0071	Kit Ventola	Fan Kit		1	
24	1241 0070	Guarnizione	Seal		1	
25	3625 0042	Vite	Screw	3,9x6,5	4	
26	1009 0192	Flangia Posteriore	Rear Flange		1	
27	0009 0275	Anello	Ring		1	
28	0438 0086	Cuscinetto a Sfere	Ball Bearing		1	

N°	Cod.	Descrizione	Description	Note	Qty	Model
29	3041 0168	Kit Statore	Stator Kit		1	8/120 - 8/120TS
	3041 0158	Kit Statore	Stator Kit		1	9/140 - 9/140TS 11/120 11/120TS
	3041 0182	Kit Statore	Stator Kit		1	11/140 - 11/170
	3041 0184	Kit Statore	Stator Kit		1	11/140TS 11/170TS
30	0001 0477	Albero Rotore	Rotor Shaft		1	8/120 - 8/120TS
	0001 0474	Albero Rotore	Rotor Shaft		1	9/140 - 9/140TS 11/120 11/120TS
	0001 0492	Albero Rotore	Rotor Shaft		1	11/140 11/140TS 11/170 11/170TS
31	0460 0033	Coperchio	Cover		1	
32	3002 0539	Flangia Anteriore	Front Flange		1	
33	0019 0034	Anello Tenuta Olio	Oil Seal	Ø40x55x7	1	
34	0438 0076	Cuscinetto a Sfere	Ball Bearing	Ø40x80x18	1	
35	3609 0041	Vite	Screw	M6x25	4	
36	1201 0127	Guarnizione Scatola Elet.	Electrical Box Gasket		1	
37	1831 0427	Motore Elettrico	Electric Motor	MNF 230V 50Hz 2,5CV	1	8/120 - 8/120TS
	1831 0419	Motore Elettrico	Electric Motor	MNF 230V 50Hz 3CV	1	9/140 - 9/140TS 11/120 11/120TS
	1831 0449	Motore Elettrico	Electric Motor	TRF 400V 50Hz 5CV	1	11/140 - 11/170
	1831 0451	Motore Elettrico	Electric Motor	TRF 400V 50Hz 5CV	1	11/140TS 11/170TS
38	1610 0787	Schema Elettrico	Electrical Diagram	MNF	1	8/120TS 9/140TS 11/120TS
	1610 0817	Schema Elettrico	Electrical Diagram	TRF	1	11/140TS
39	2434 0062	Pressacavo	Cable Holder	M22x1,5	1	
40	2434 0052	Pressacavo	Cable Holder	M20x1,5	1	Solo / Only MNF
41	3625 0036	Vite	Screw	3,9x13	4	
42	0402 0264	Scatola Elettrica	Electrical Box		1	
43	1210 0345	Guarnizione OR	O-Ring	Ø1,78x101,32	1	
44	3625 0052	Vite	Screw	4,8x13	4	
45	1003 0075	Fissaggio Condensatore	Capacitor Holder		1	
46	0434 0019	Condensatore	Condenser	40µF	1	Solo / Only 8/120 - 8/120TS
	0434 0021	Condensatore	Condenser	50µF	1	Solo / Only 9/140 - 11/120 11/120TS
47	3225 0088	Teleruttore	Contactore	12A 400V	1	Solo / Only 11/140TS 11/170TS